

Installation and configuration

Table of contents

Installation and configuration steps 1

This guide covers [downloading](#) and [installing](#) Coreform IGA for Abaqus, [configuring Abaqus](#) to support it, and [licensing](#).

Installation and configuration steps

Step 1

[Download & Install Abaqus](#)

Install Abaqus 2026 Hot Fix 5 (HF5).

[Open Abaqus installation instructions →](#)

Step 2

[Download Coreform IGA for Abaqus](#)

Choose the latest development build for your operating system from Coreform's download page.

[Download Coreform IGA for Abaqus →](#)

Step 3

[Install Coreform IGA for Abaqus](#)

Install the Coreform IGA package on Windows or Linux and select the appropriate installer options.

[Open installation instructions →](#)

Step 4

[Configure licensing](#)

Activate Coreform-hosted licensing or configure a self-hosted RLM license server.

[Set up licensing →](#)